




















Инструкция по сборке душевой кабины


СТАНДАРТ / УЛЬТРА


НИЗКИЙ/СРЕДНИЙ/ ВЫСОКИЙ ПОДДОН

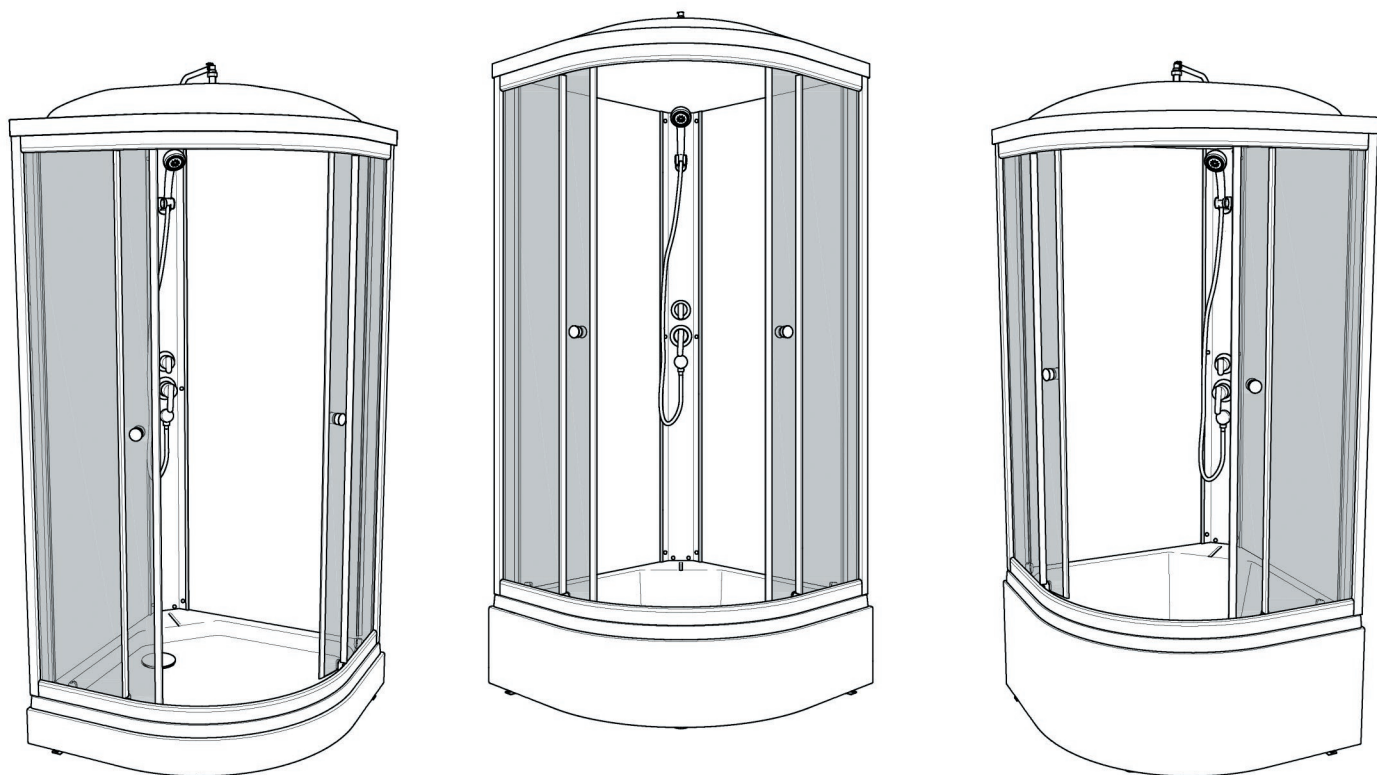

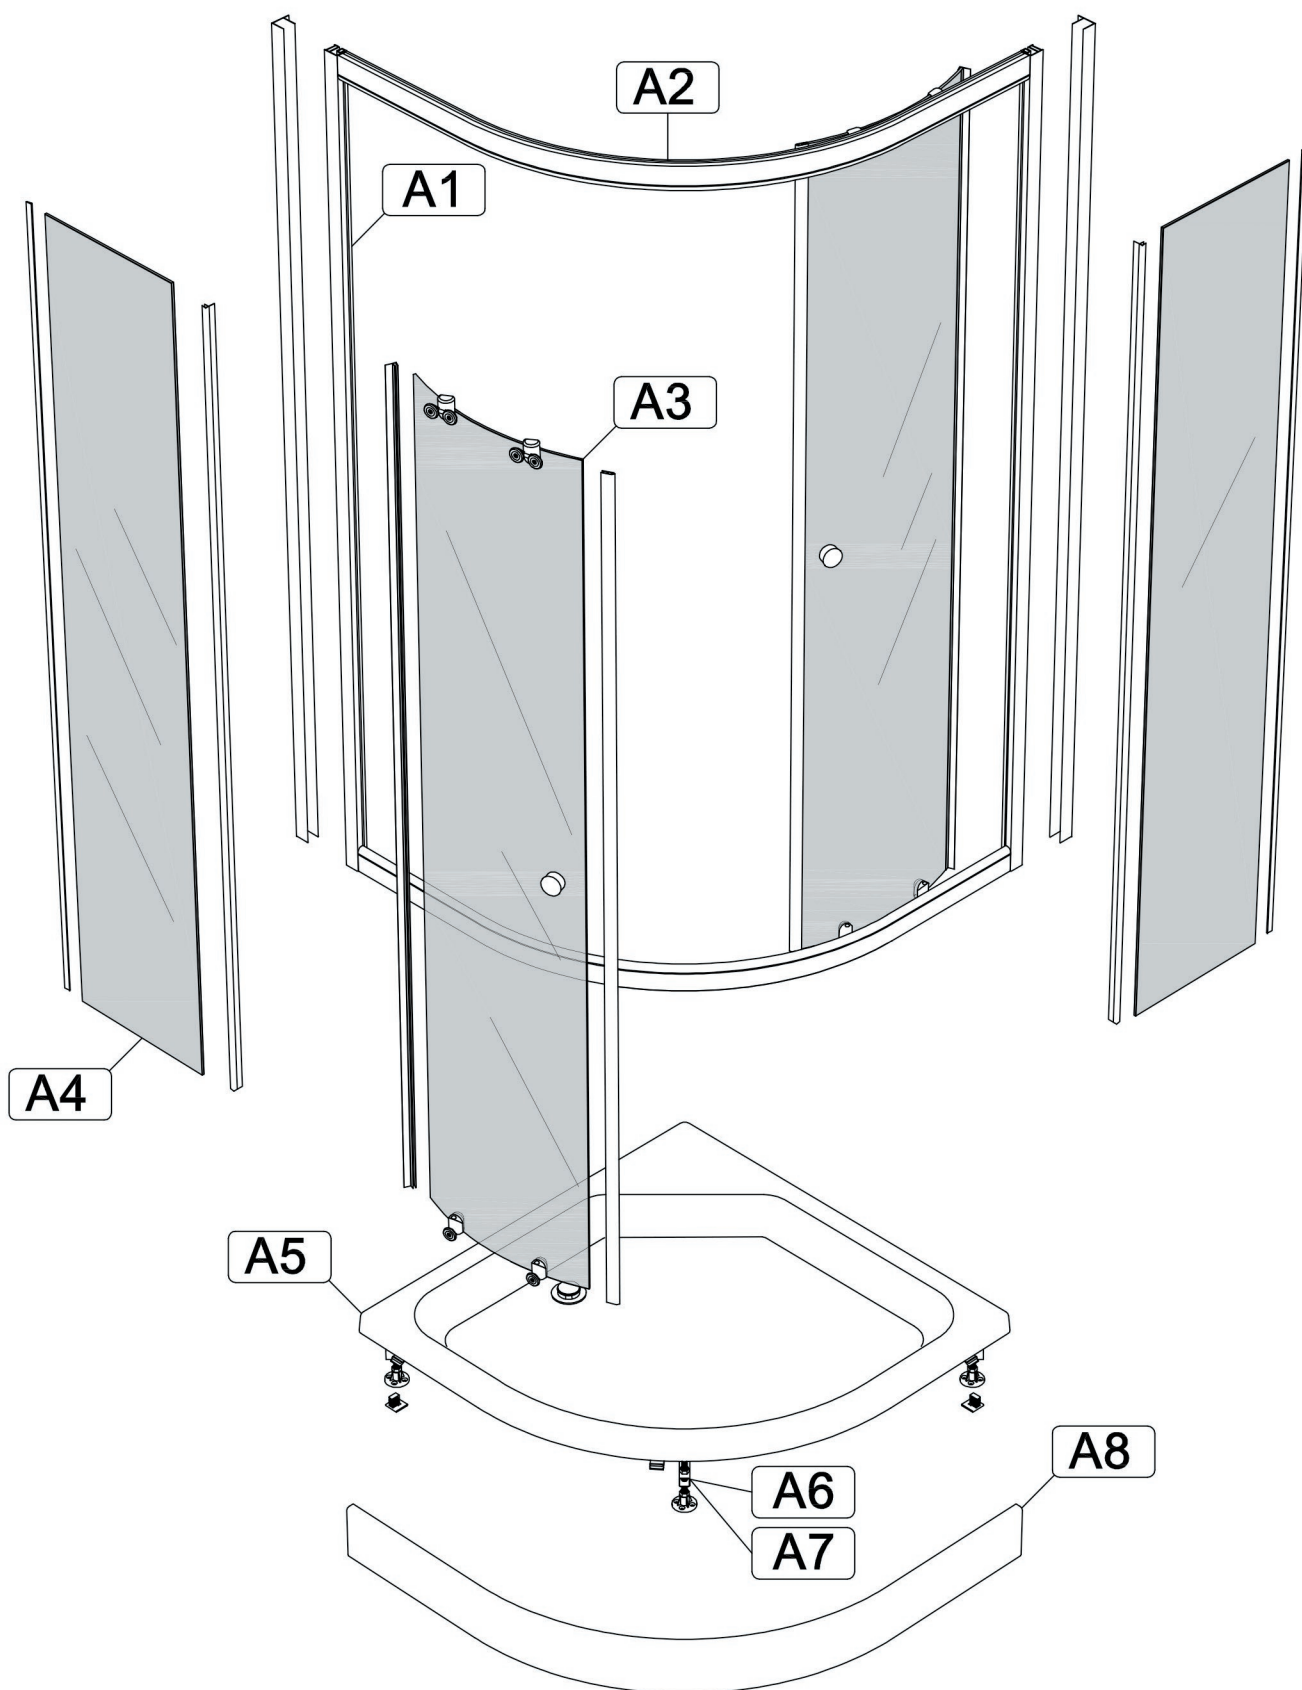


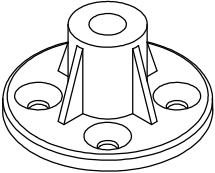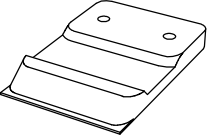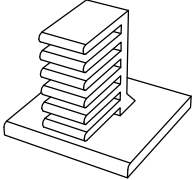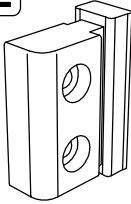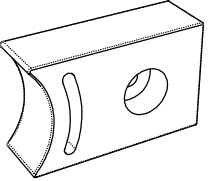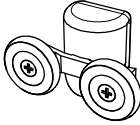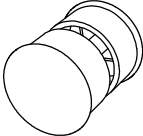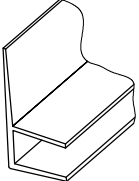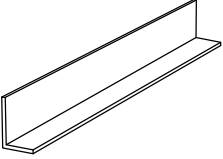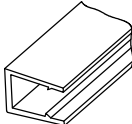B1 	B2 M10 	B3 	B7  L=70mm	B8 
B4 	B5 	B6 3.5x16 		
B9 3.5x12 	B10 3.5x35 	B11 3.5x19 	B12 	B13 
B14 	B15 	B16 	B17 	B18 
B19 	B20 	B21 	B22 	B23 
B24 	B25 	B26 M4x20 	B27 M4 	B28 
B29 	B30 			


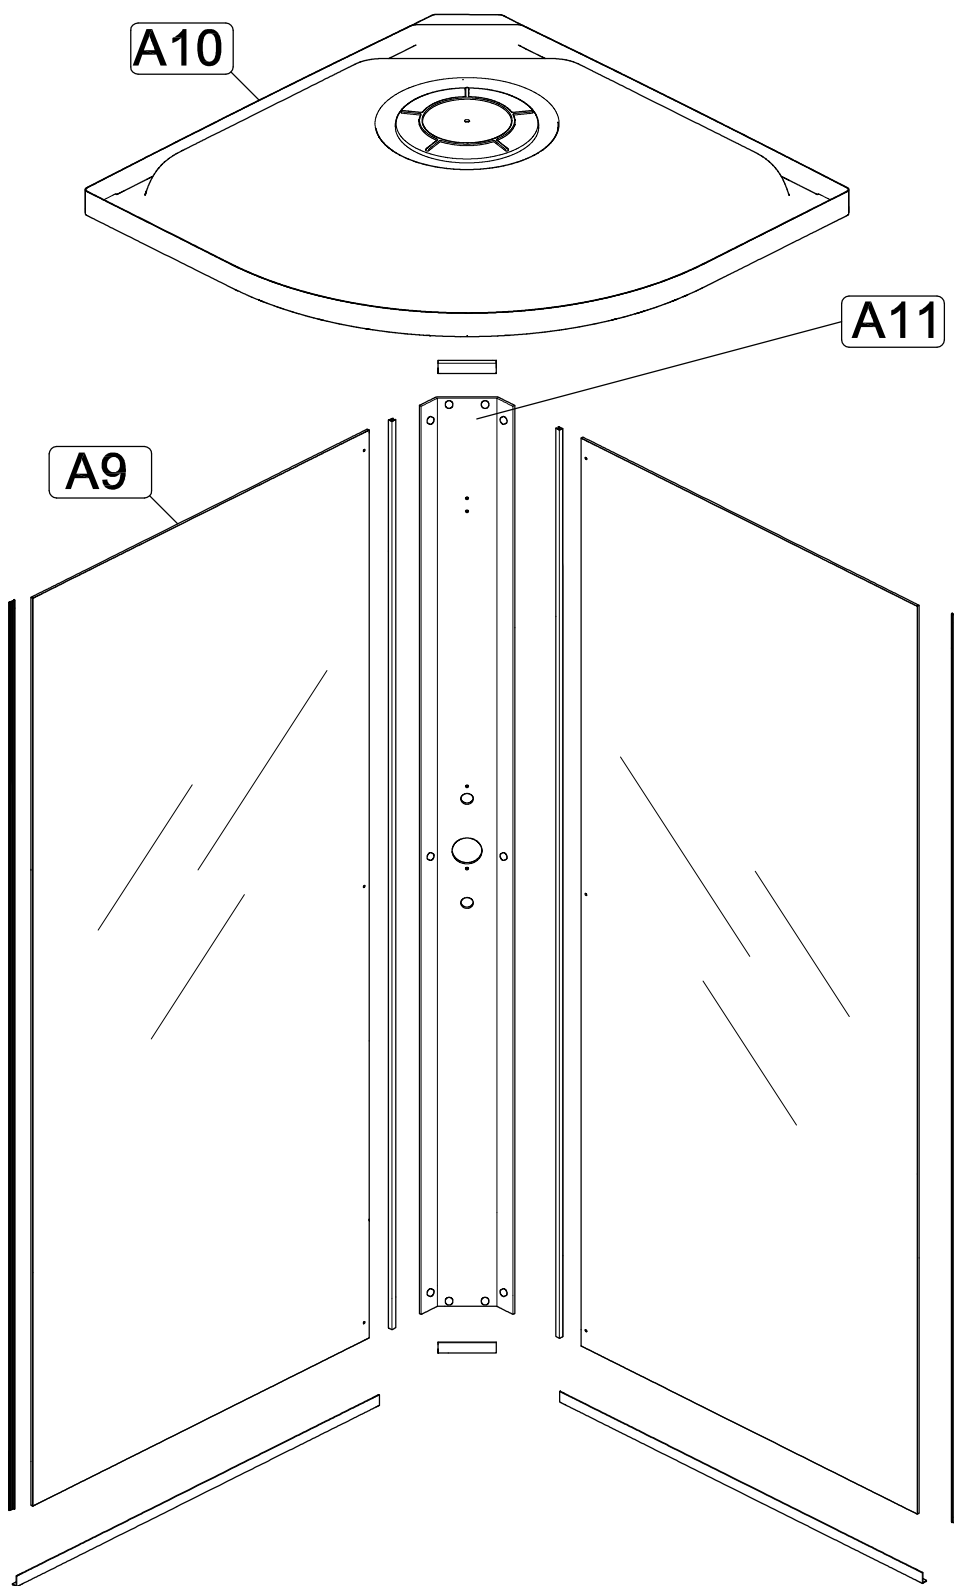


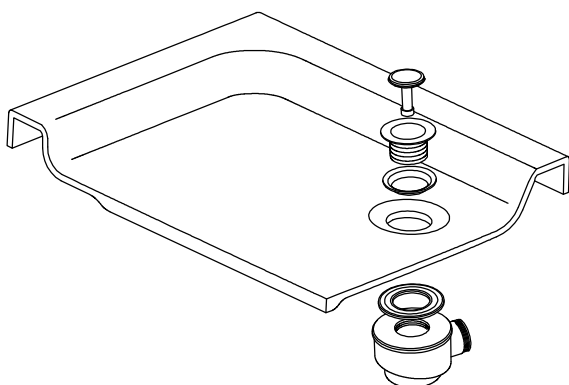

B1
B2
B8


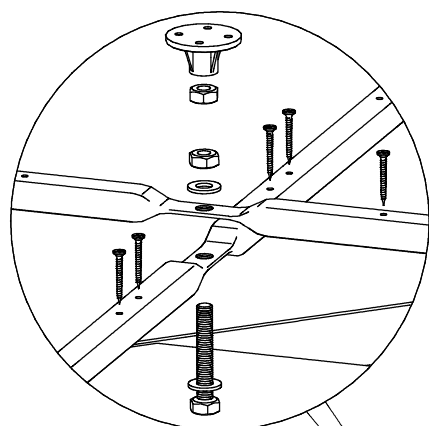


A6 B1
A7 B2
B3
B7
B10


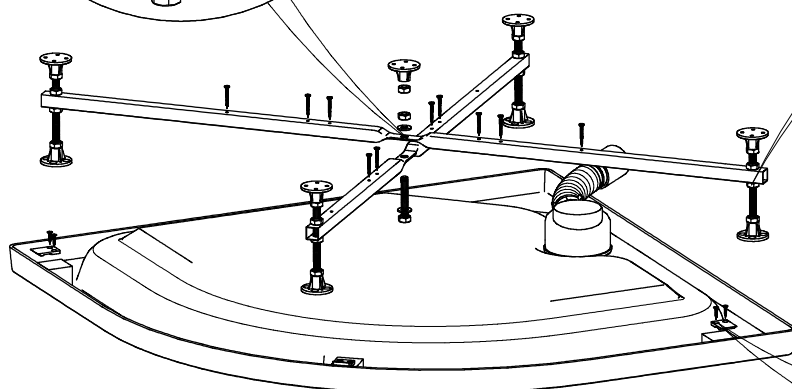
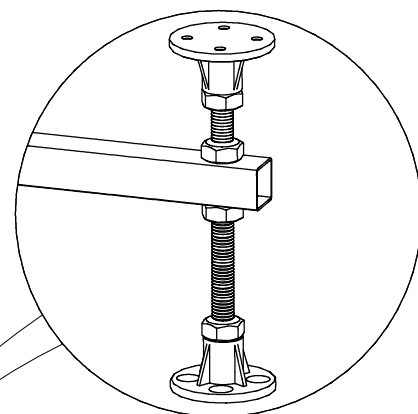


A5



B4
B11

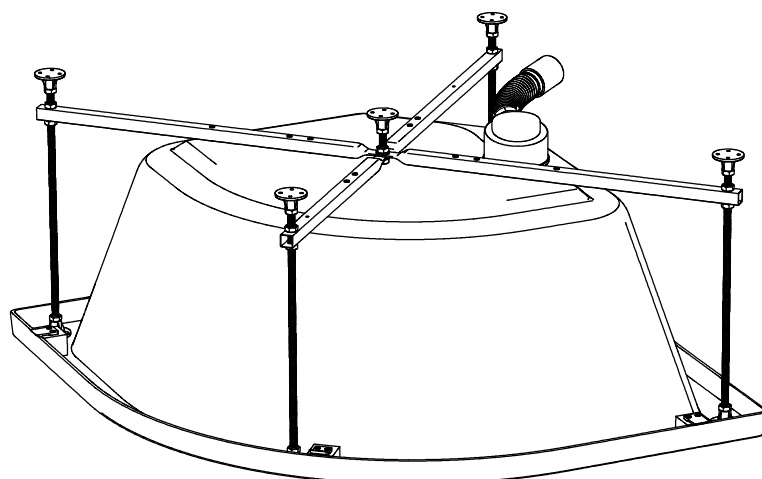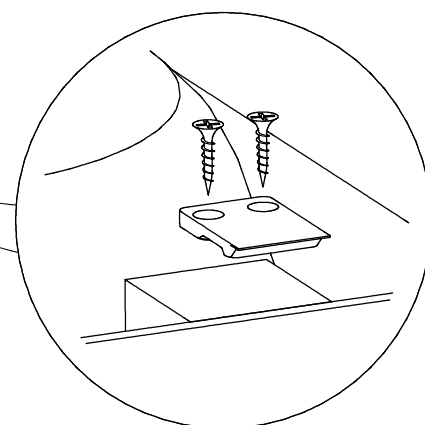



Добор и крепление к стене
в комплект
не входит

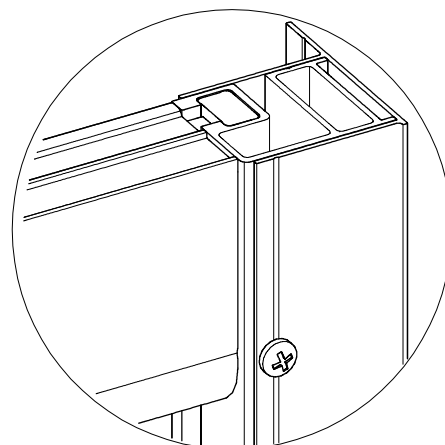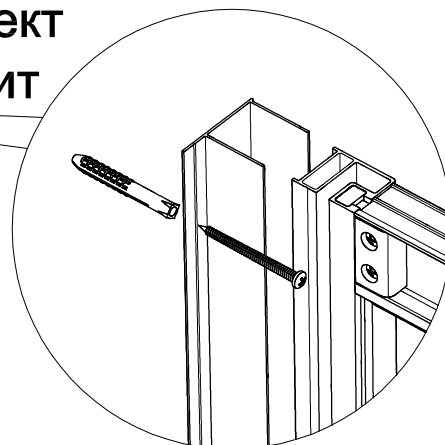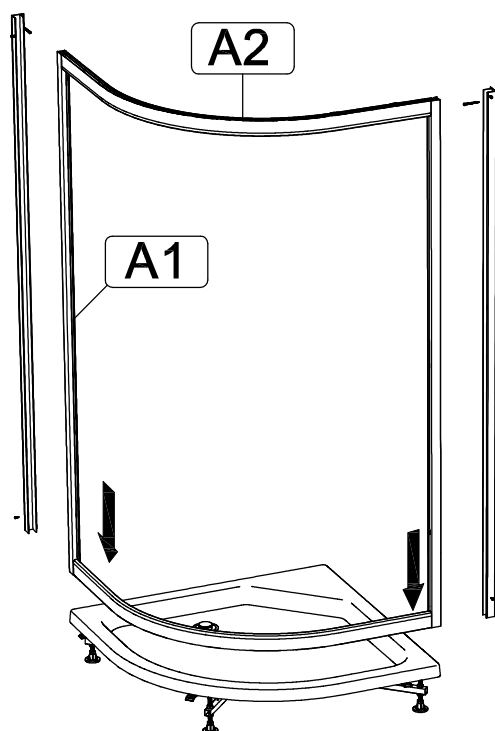


B6
B12

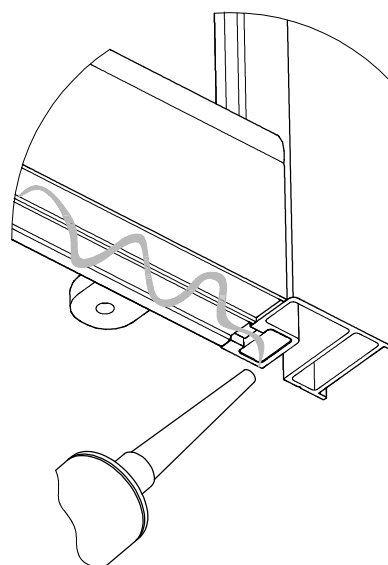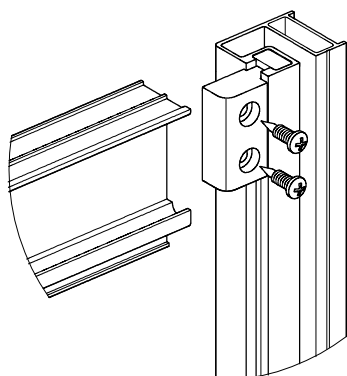


Нейтральный силиконовый
герметик

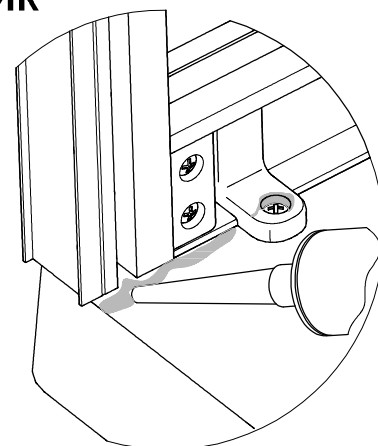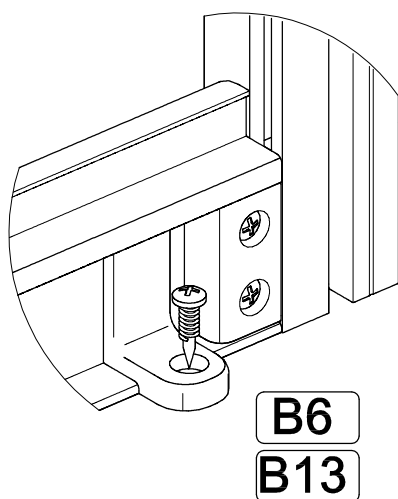

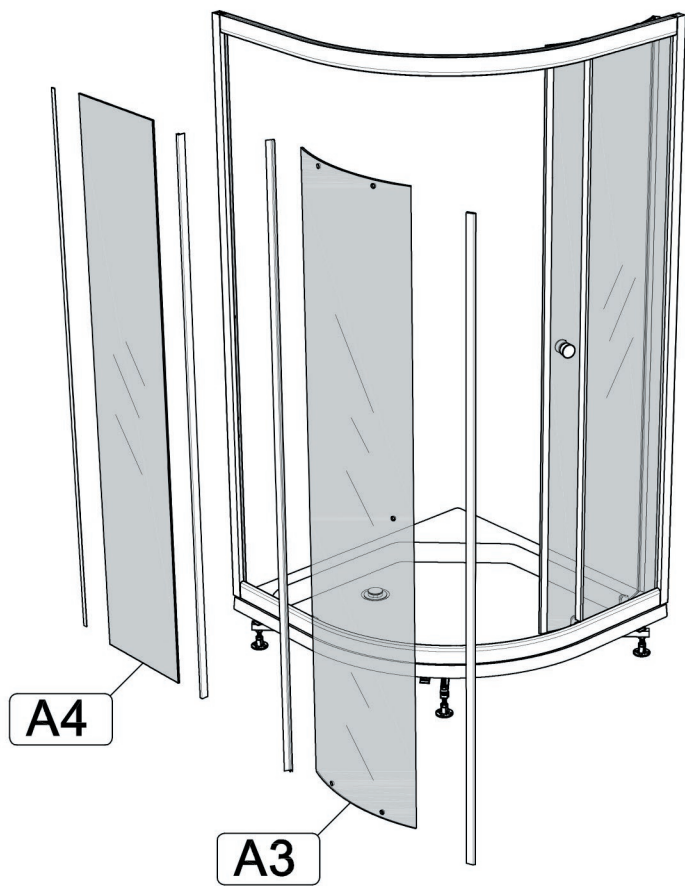


B9
B14

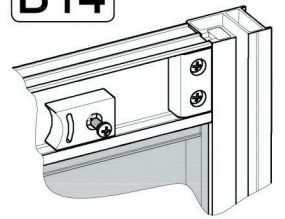

B21 ✂


B19 ✂

B9
B15

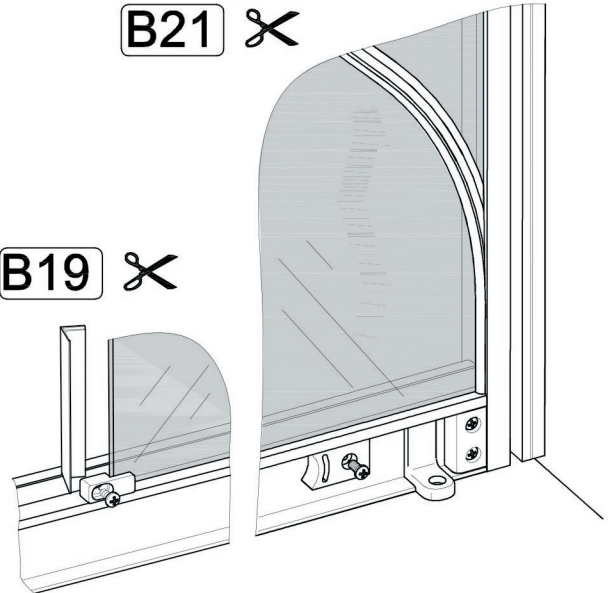


B19 ✂

B16

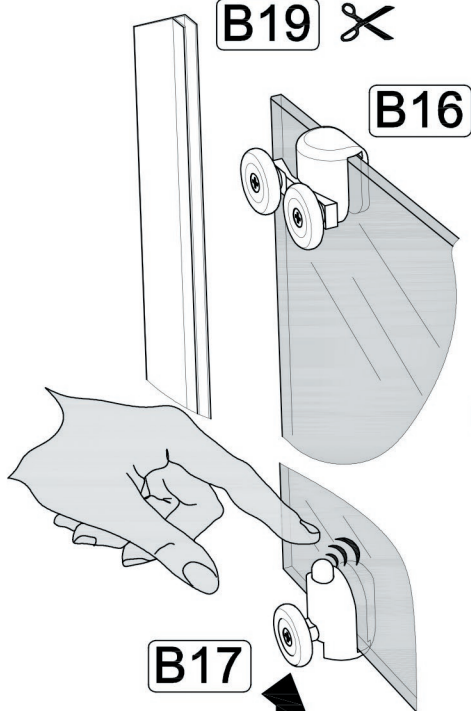


B17

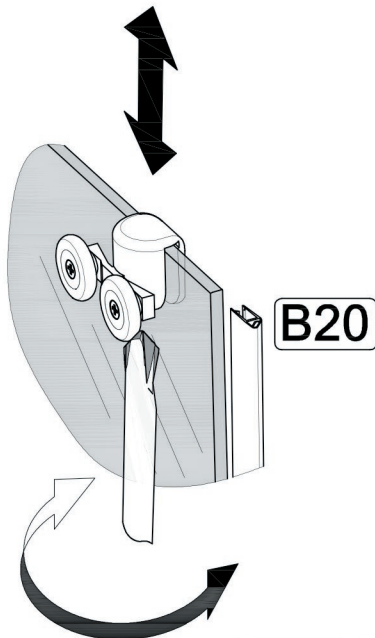

B20


A4
B18



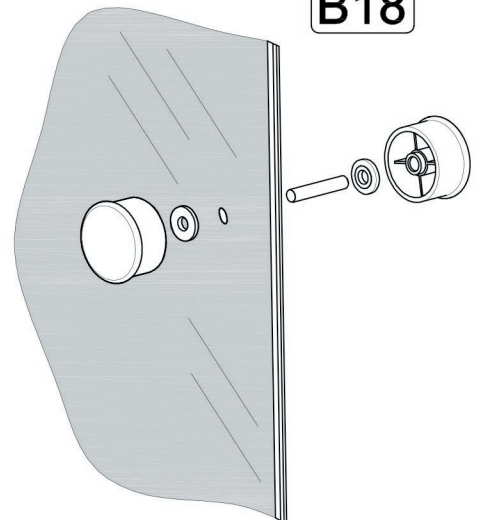


B9
B14

=



B9
B14

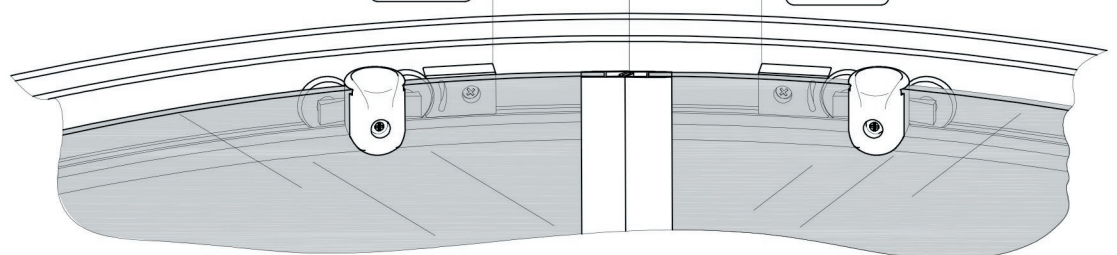

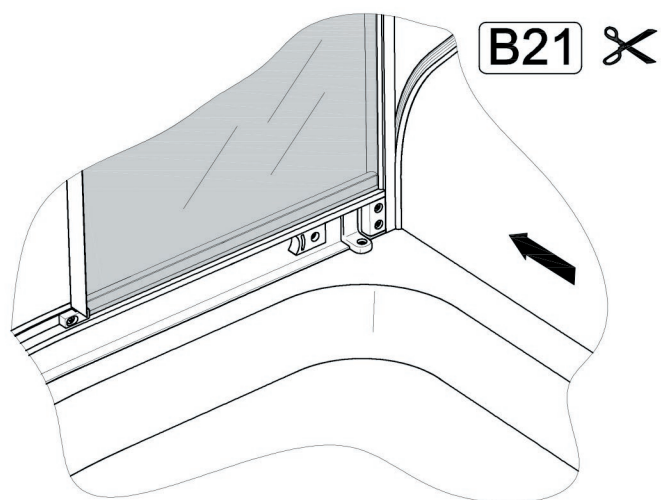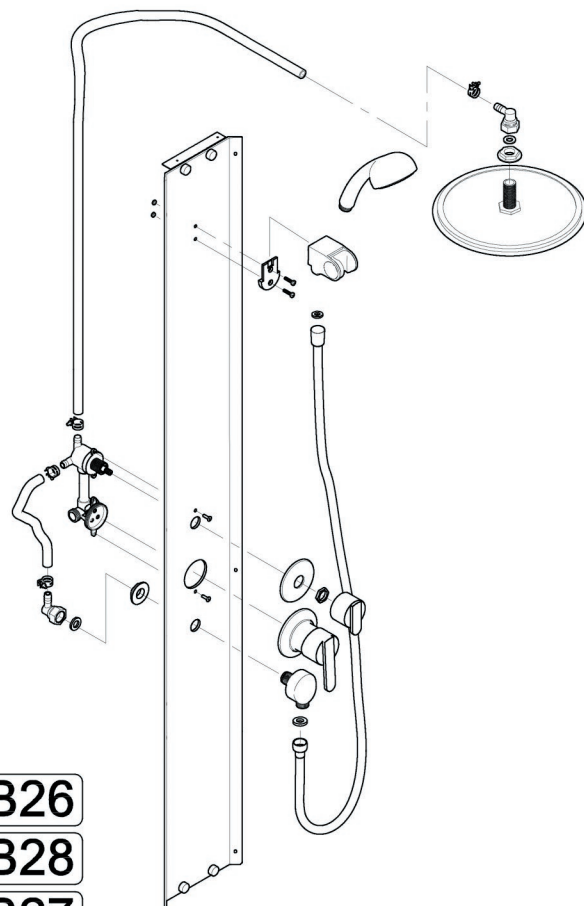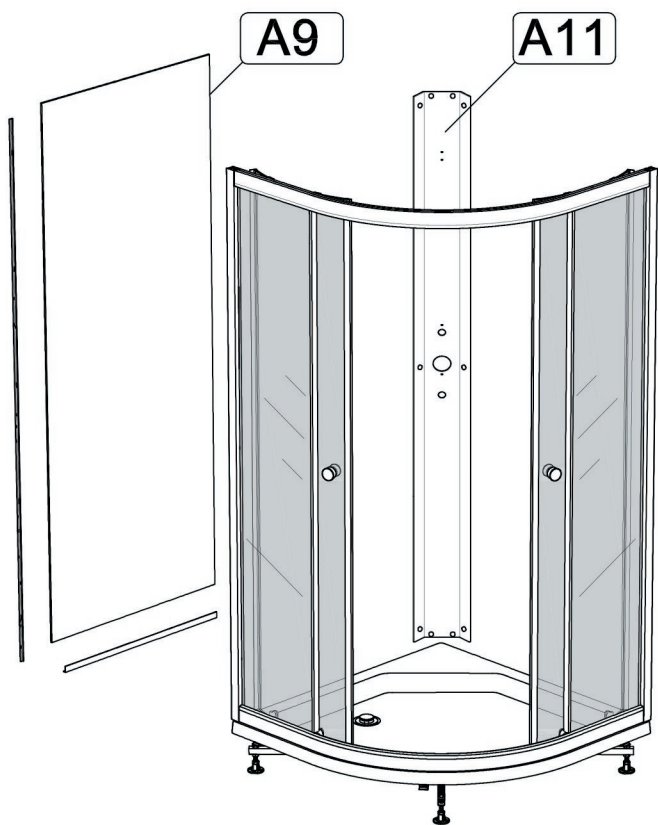


B24 B26
B25 B28
B29 B27

B24 B6
B25 B23

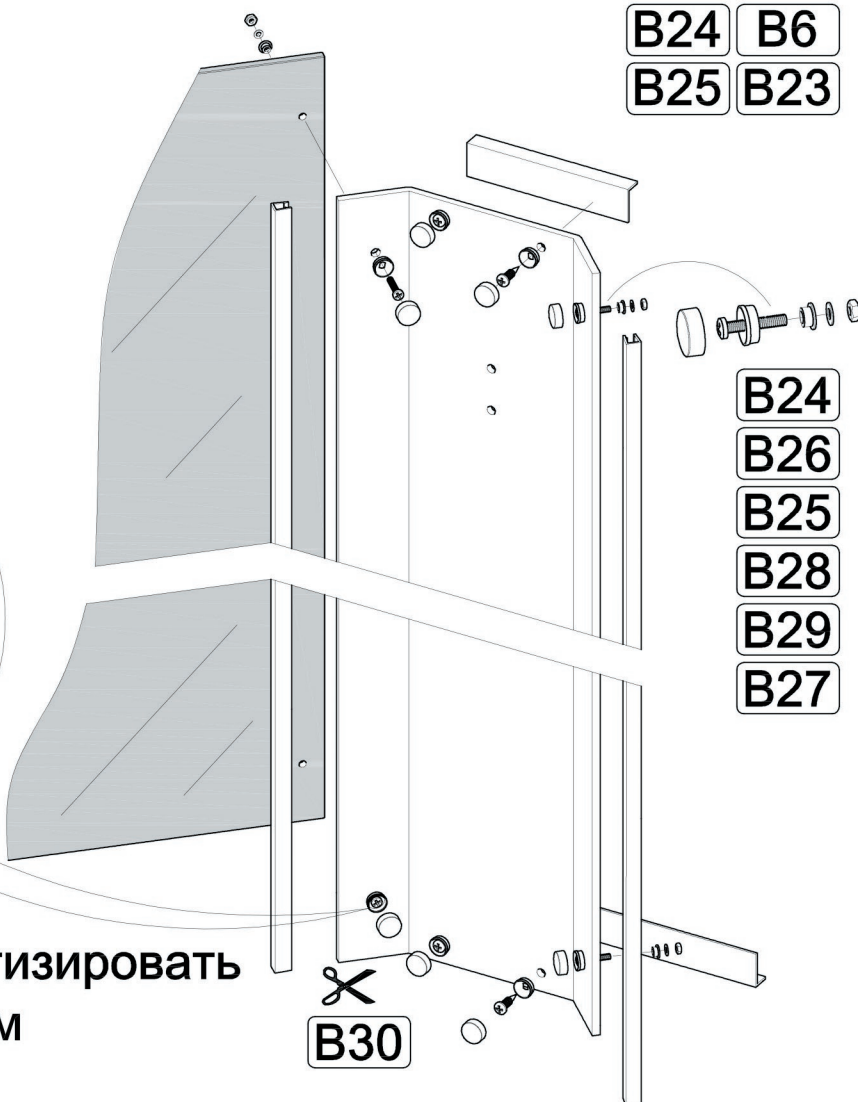
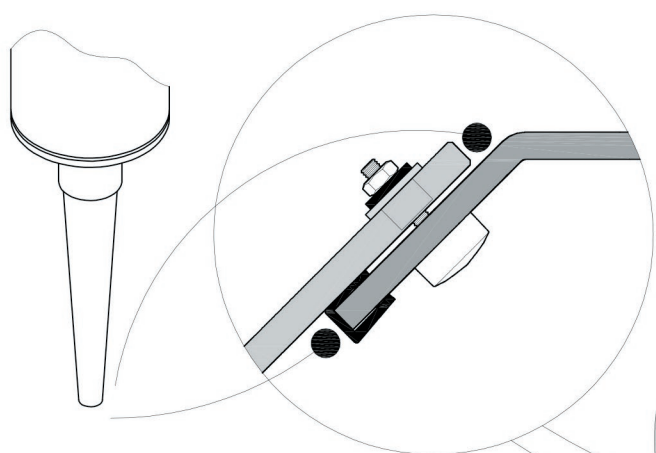


Место примыкания герметизировать
нейтральным силиконовым
герметиком

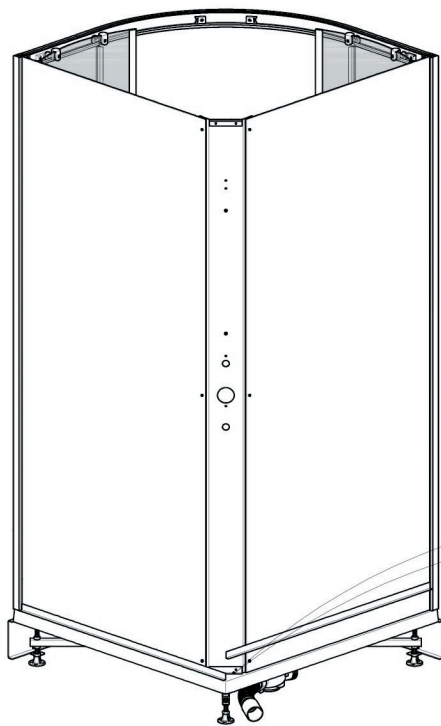



B6
B22

B6

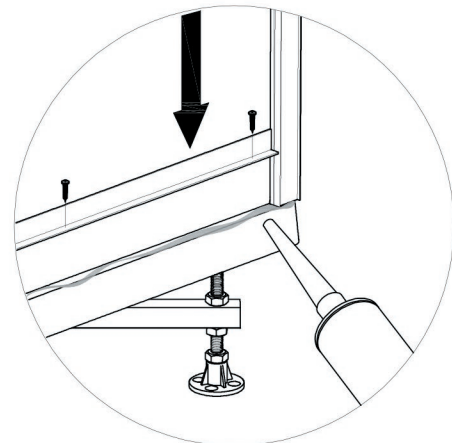
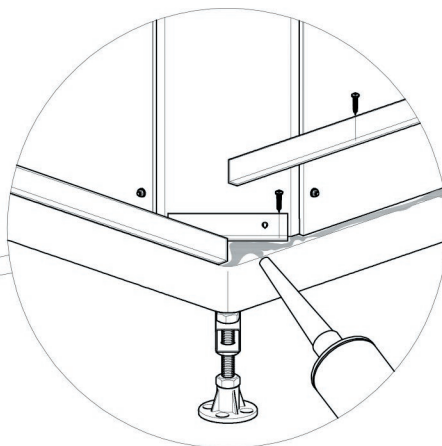


Нейтральный силиконовый герметик


B6

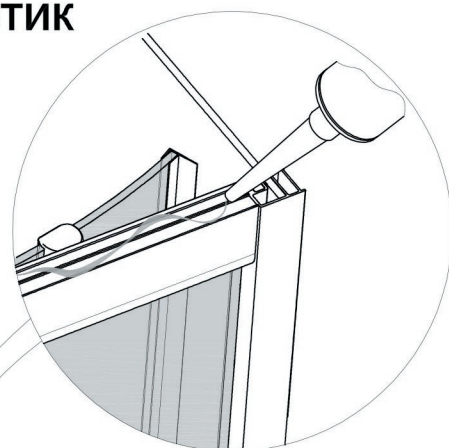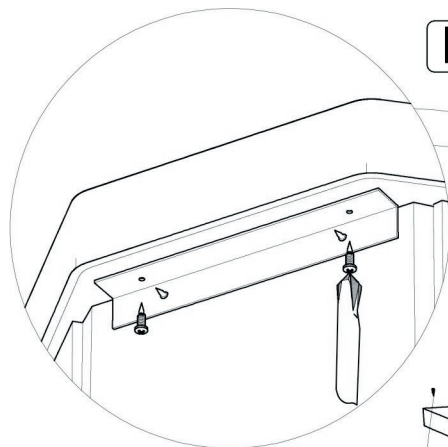

B9

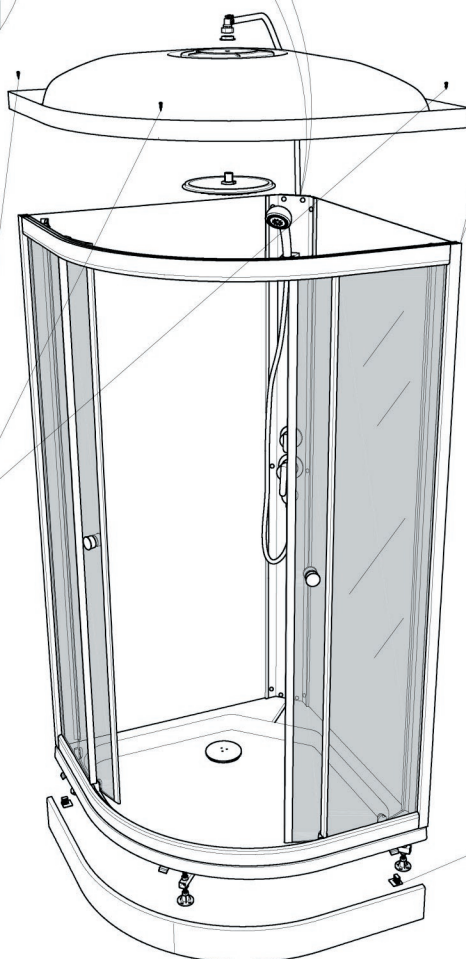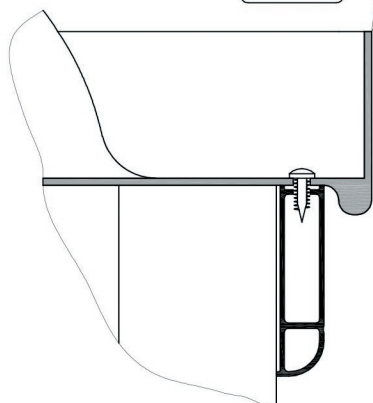

A8
B5

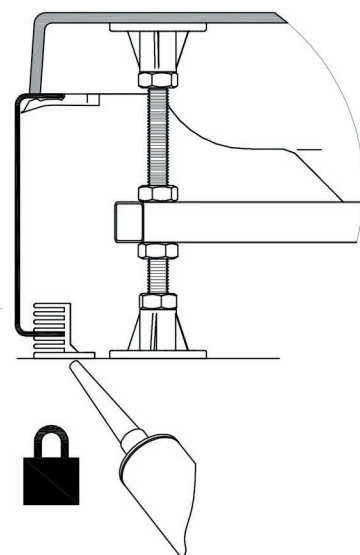

www.3tn.ru