





Инструкция по сборке душевой кабины
















# СТАНДАРТ / УЛЬТРА


НИЗКИЙ/СРЕДНИЙ/ ВЫСОКИЙ ПОДДОН

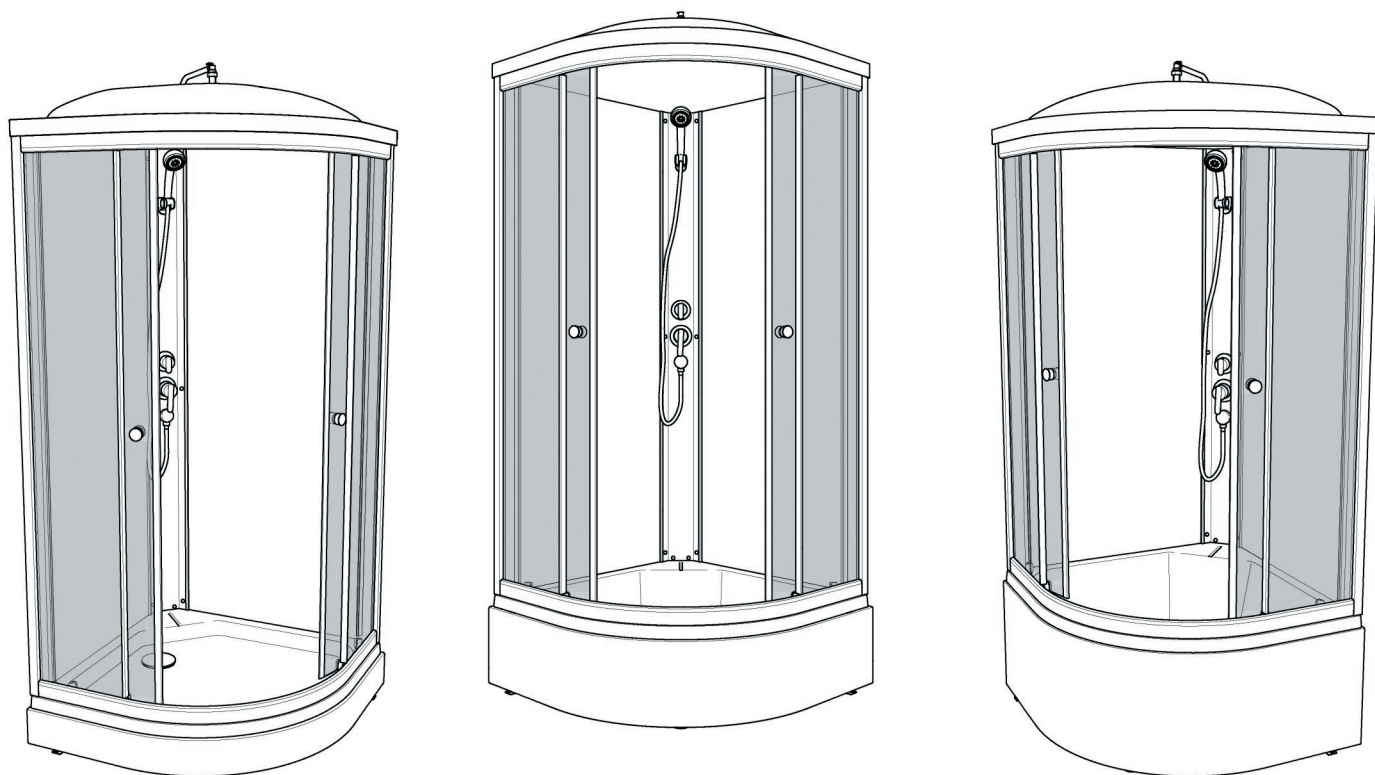




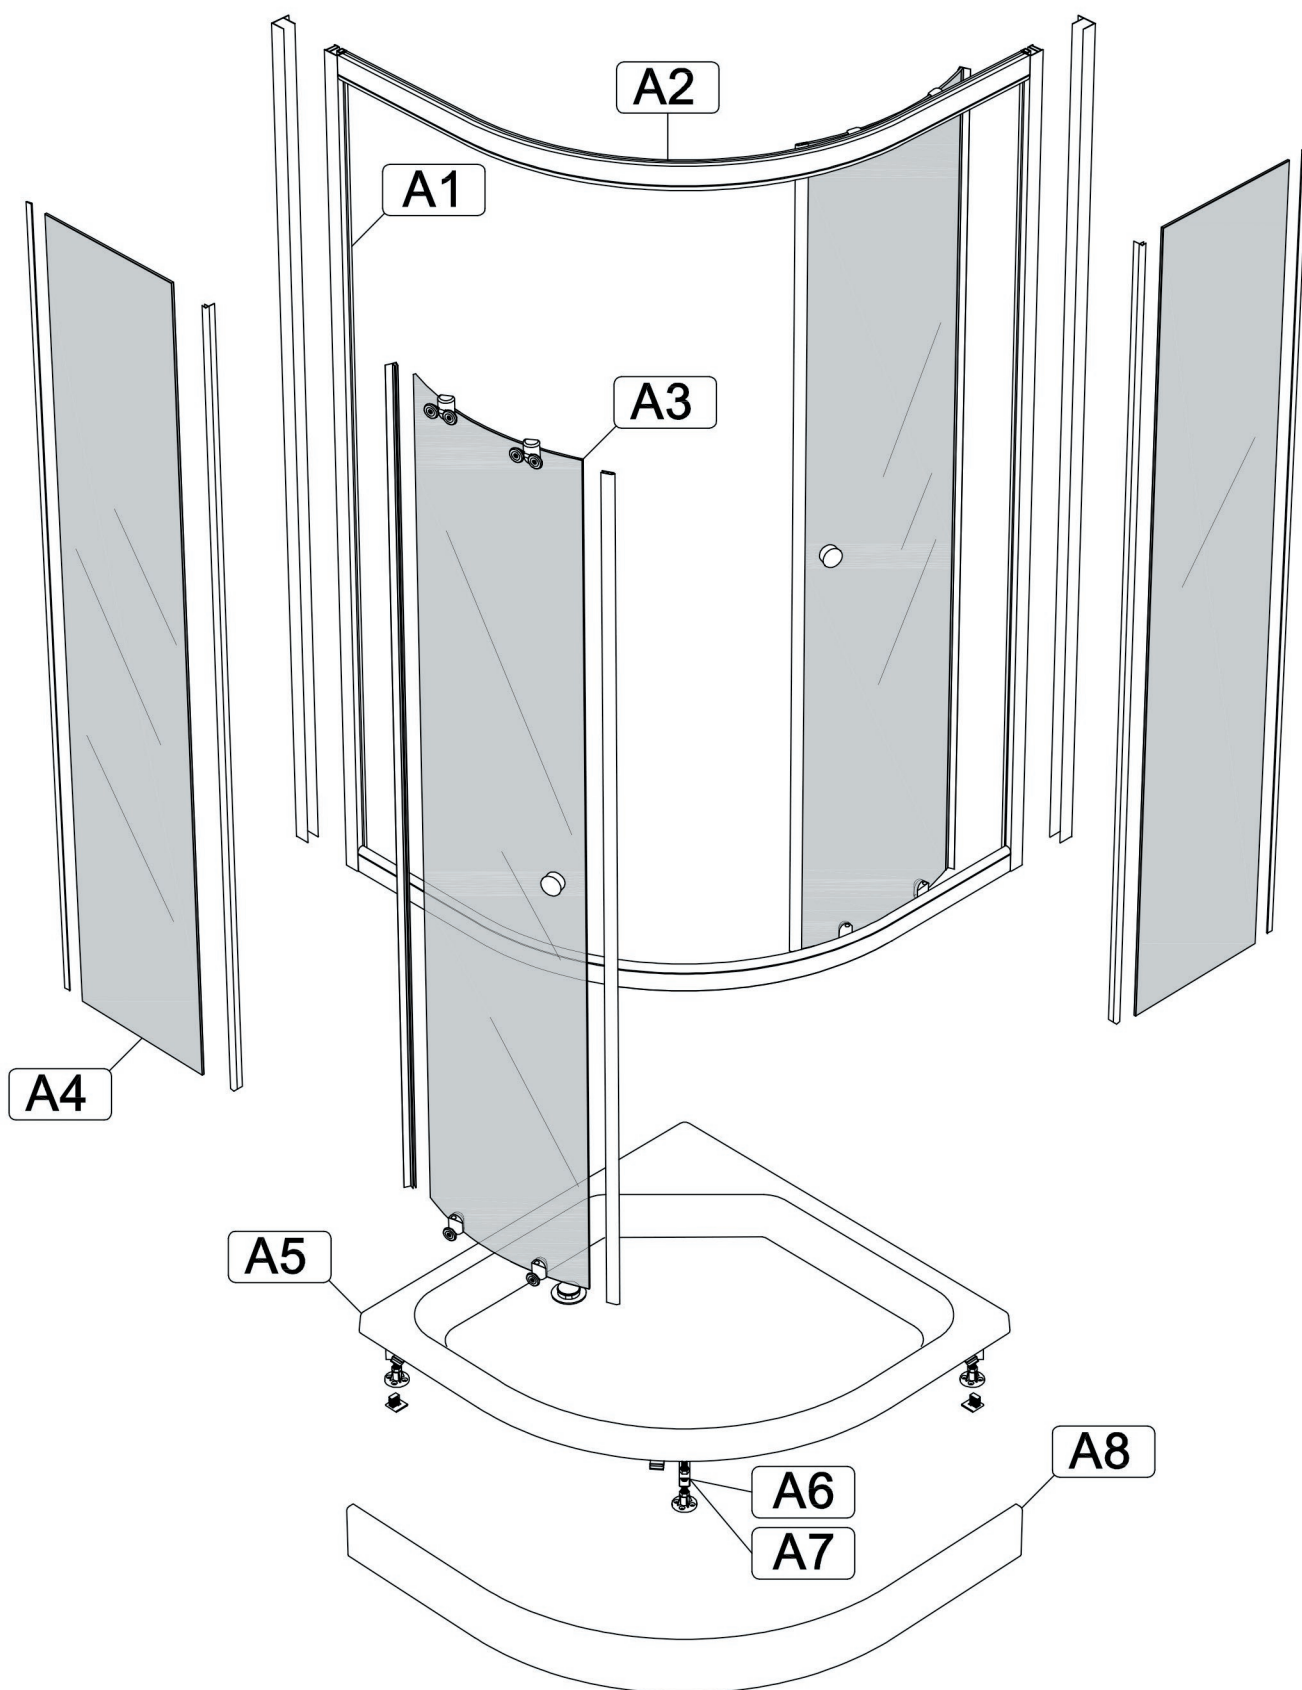

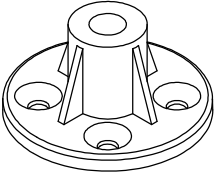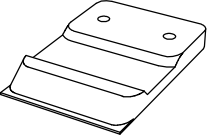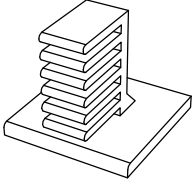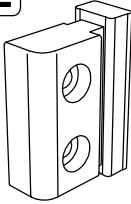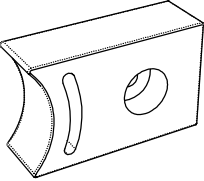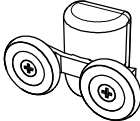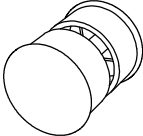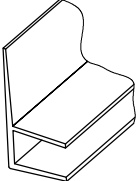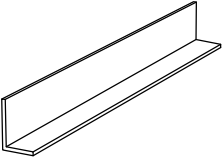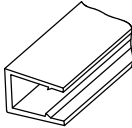
|                                                                                                       |                                                                                                        |                                                                                                         |                                                                                                                |                                                                                                     |
|-------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| <b>B1</b><br>        | <b>B2</b> M10<br>     | <b>B3</b><br>          | <b>B7</b><br><br><br>L=70mm | <b>B8</b><br>    |
| <b>B4</b><br>        | <b>B5</b><br>         | <b>B6</b> 3.5x16<br>   |                                                                                                                |                                                                                                     |
| <b>B9</b> 3.5x12<br> | <b>B10</b> 3.5x35<br> | <b>B11</b> 3.5x19<br>  | <b>B12</b><br>              | <b>B13</b><br>   |
| <b>B14</b><br>     | <b>B15</b><br>      | <b>B16</b><br>       | <b>B17</b><br>            | <b>B18</b><br> |
| <b>B19</b><br>     | <b>B20</b><br>      | <b>B21</b><br>       | <b>B22</b><br>            | <b>B23</b><br> |
| <b>B24</b><br>     | <b>B25</b><br>      | <b>B26</b> M4x20<br> | <b>B27</b> M4<br>         | <b>B28</b><br> |
| <b>B29</b><br>     | <b>B30</b><br>      |                                                                                                         |                                                                                                                |                                                                                                     |


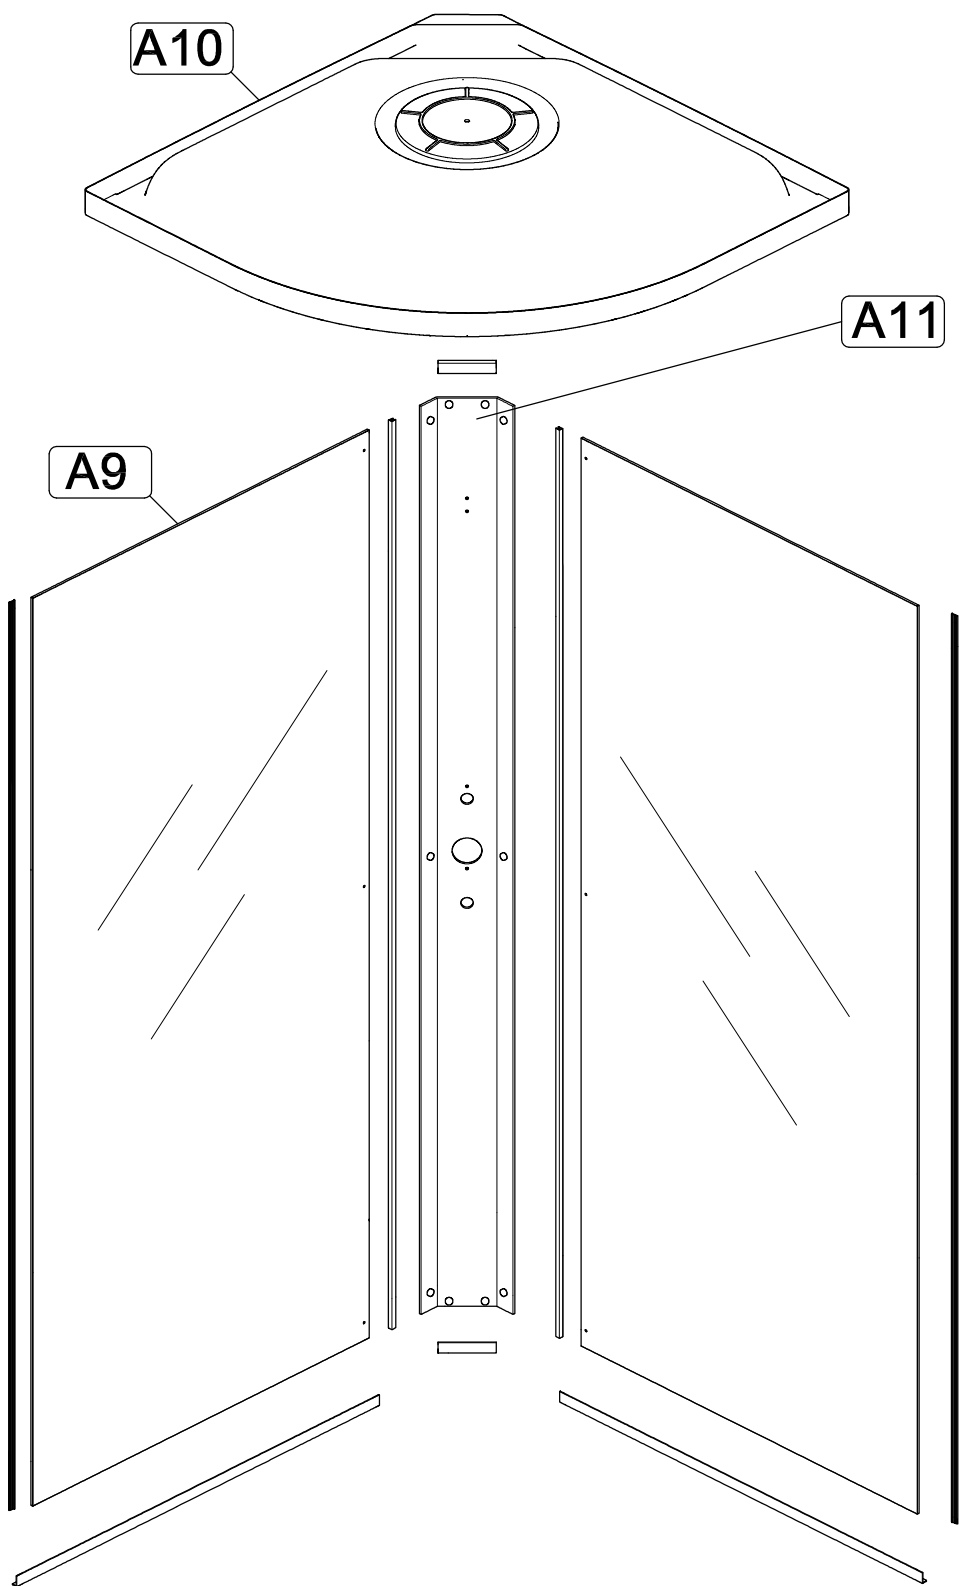


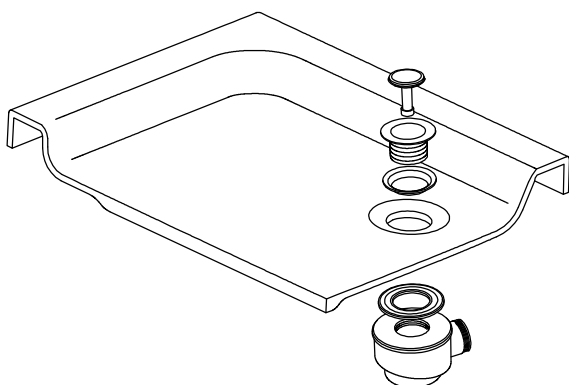

B1  
B2  
B8


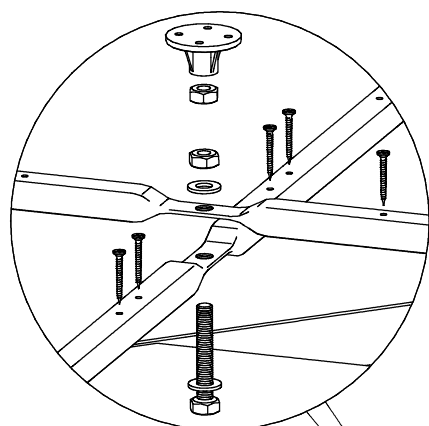


A6 B1  
A7 B2  
B3  
B7  
B10


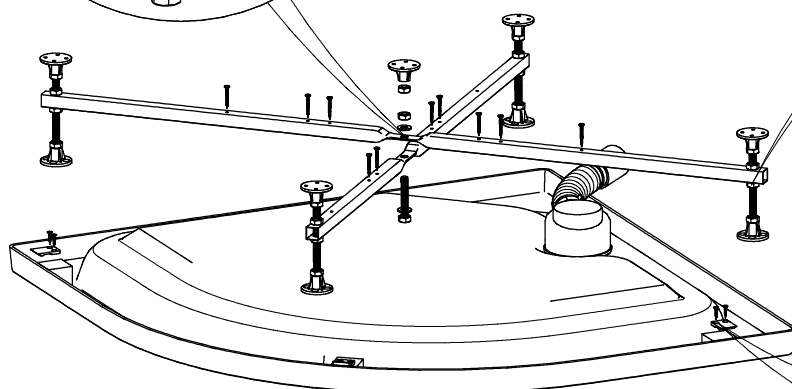
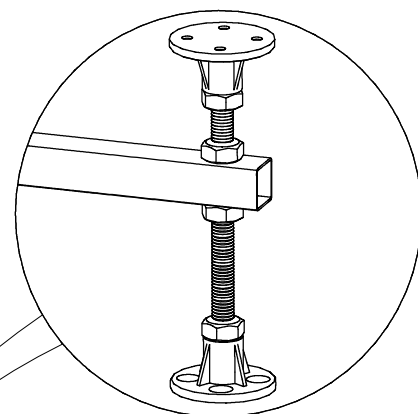


A5



B4  
B11

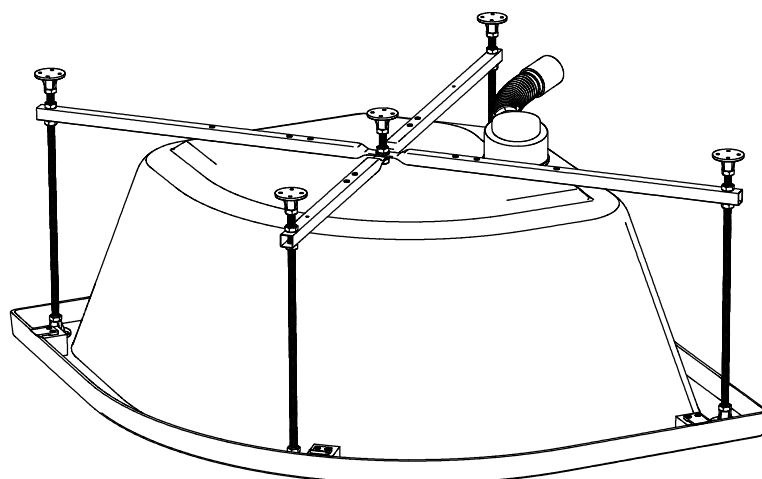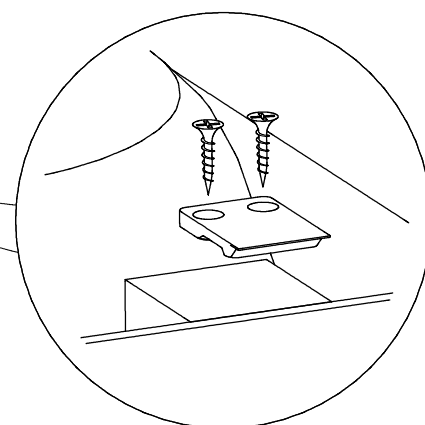


Добор и крепление к стене  
в комплект  
не входит

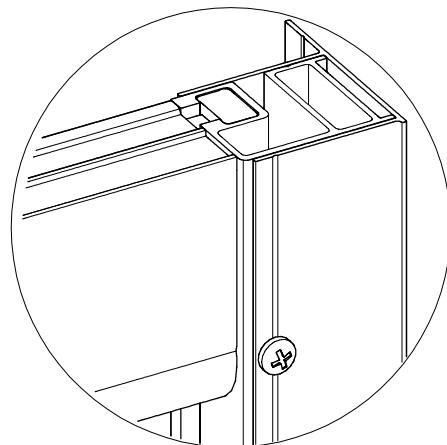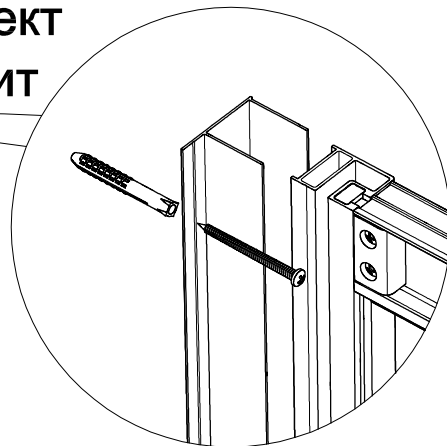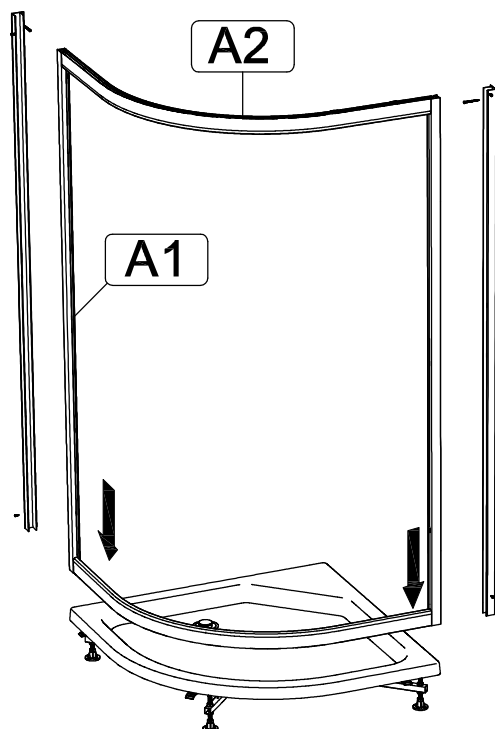


B6  
B12

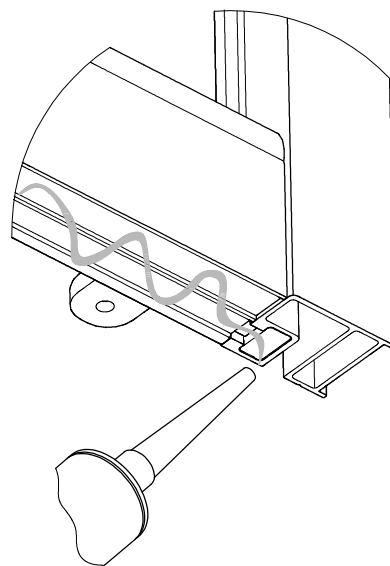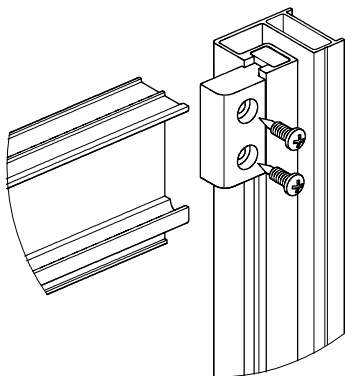


Нейтральный силиконовый  
герметик

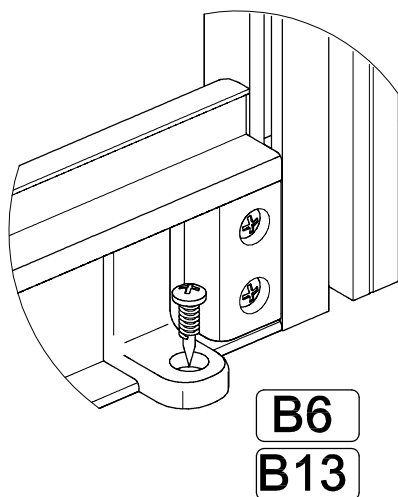


B6  
B13

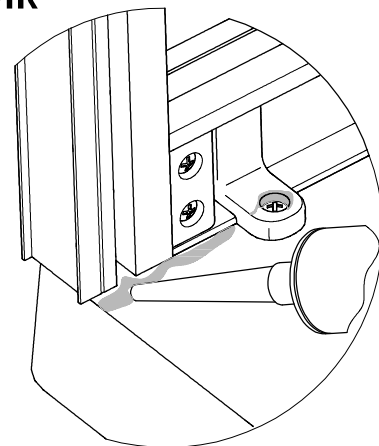

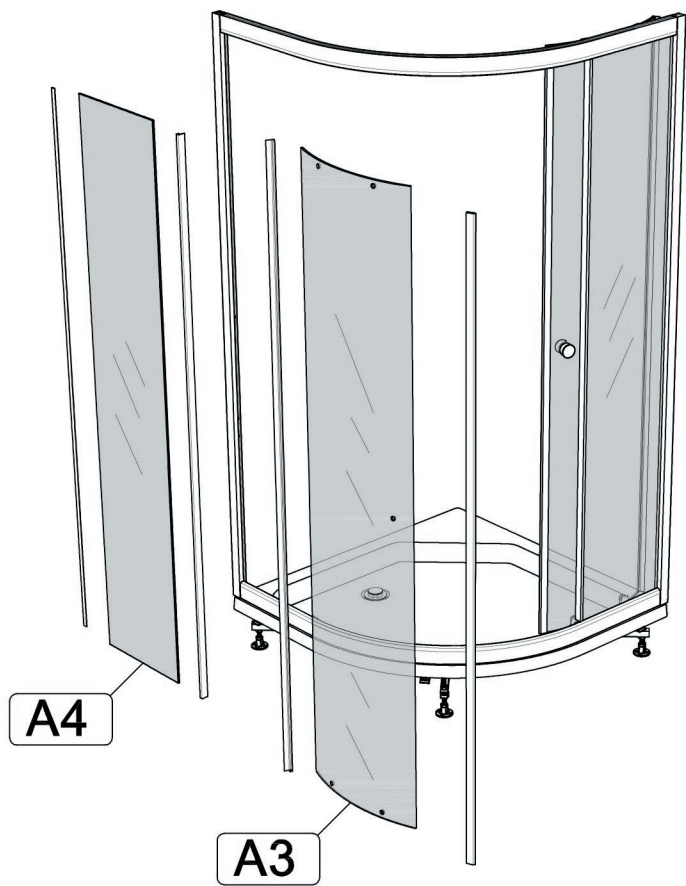


B9  
B14

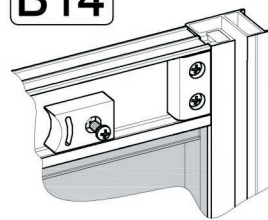

B21 ✂


B19 ✂

B9  
B15

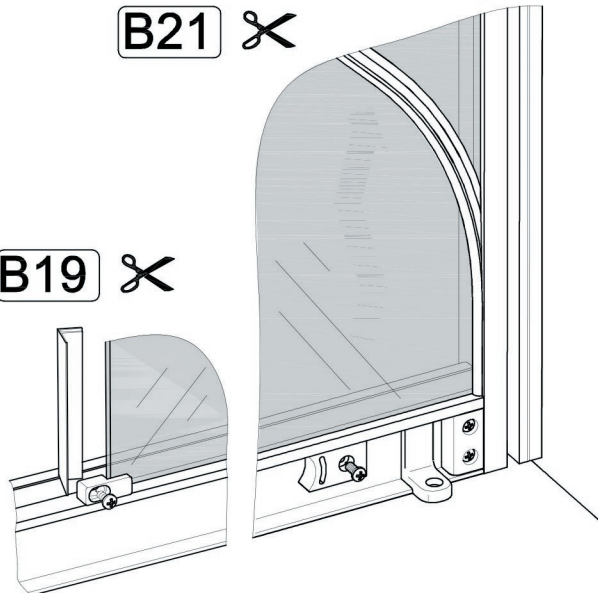

B19 ✂


B16

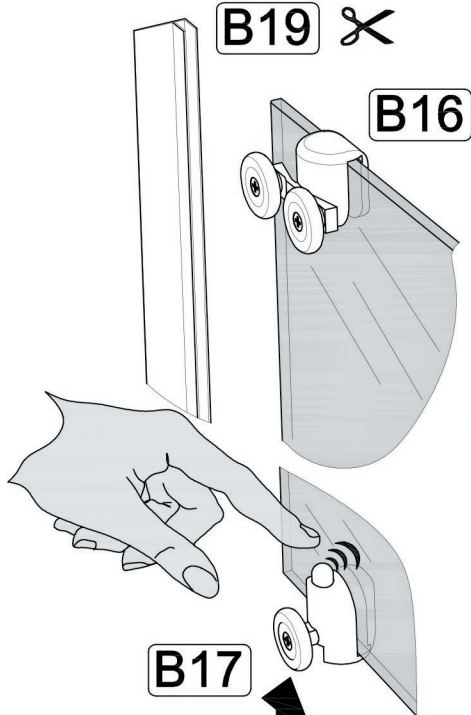

B17


B20




A4  
B18

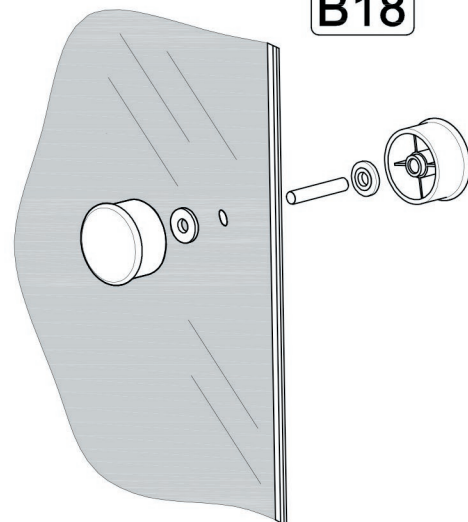

B9  
B14



B9  
B14

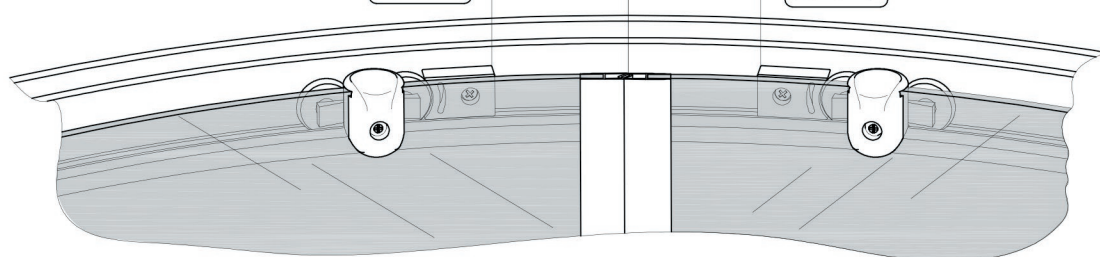

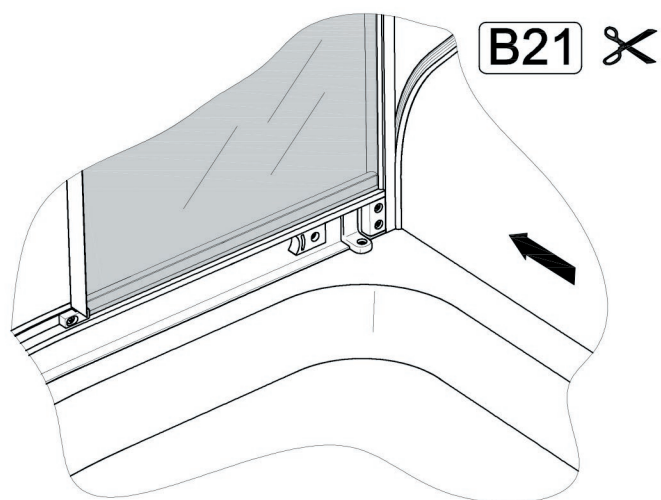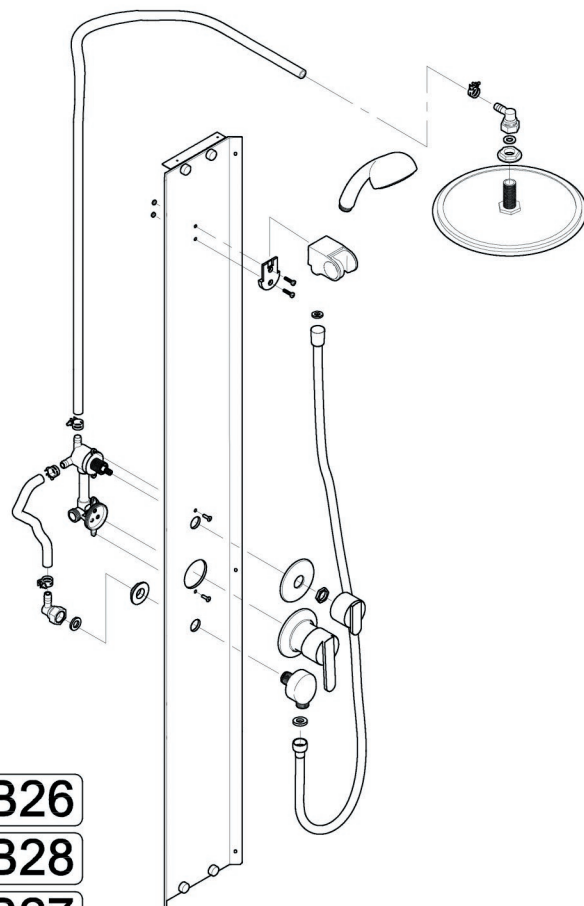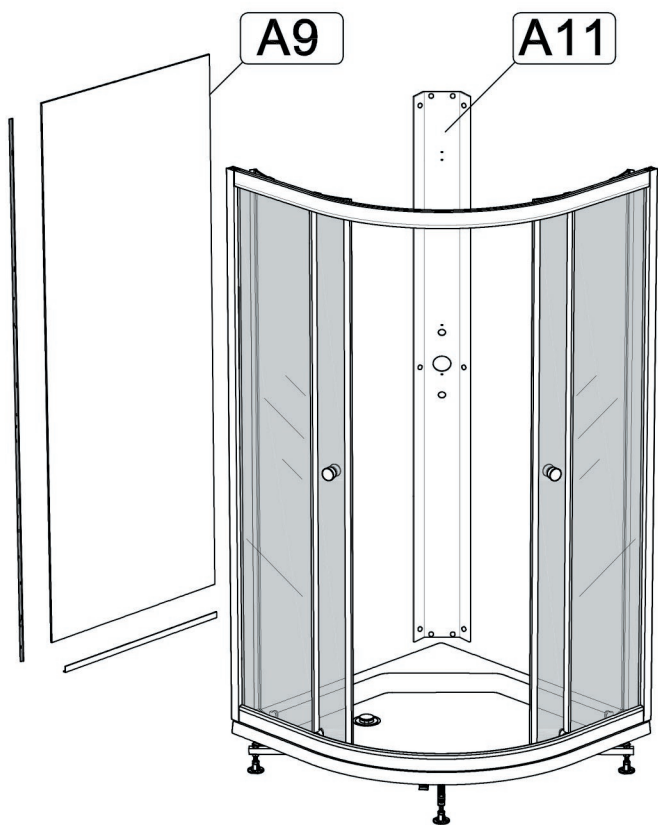


B24 B26  
B25 B28  
B29 B27

B24 B6  
B25 B23

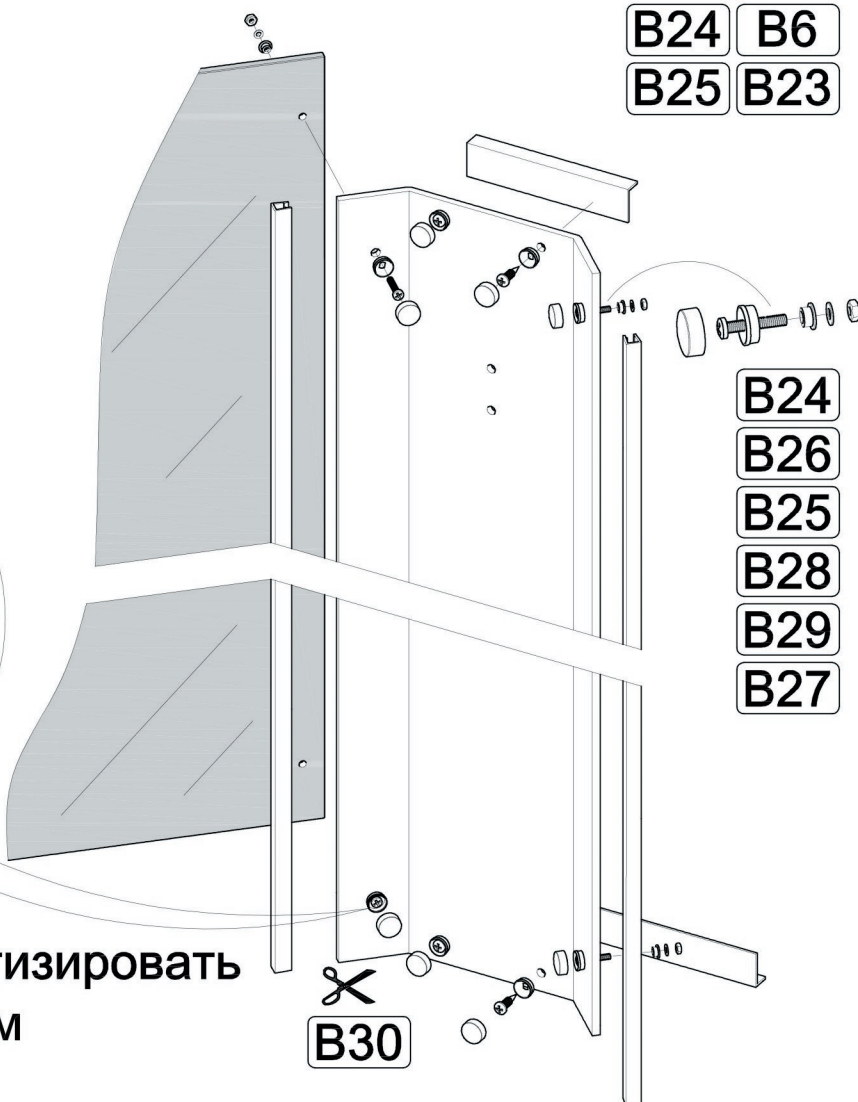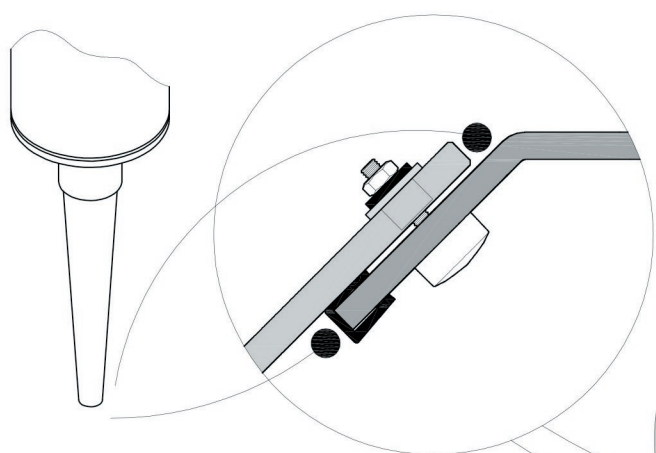


Место примыкания герметизировать  
нейтральным силиконовым  
герметиком


✂  
B30

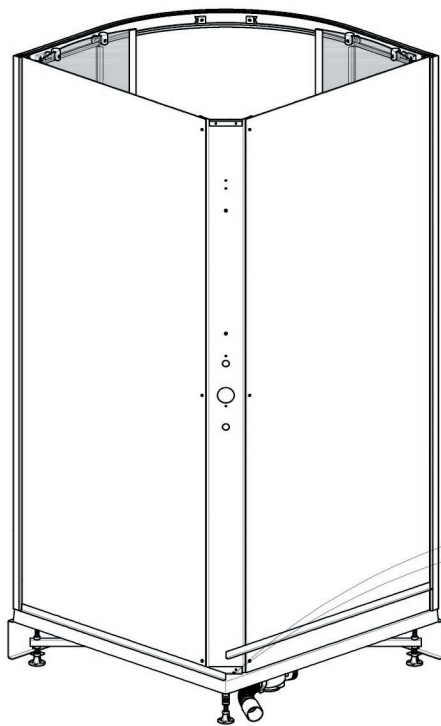

B6  
B22



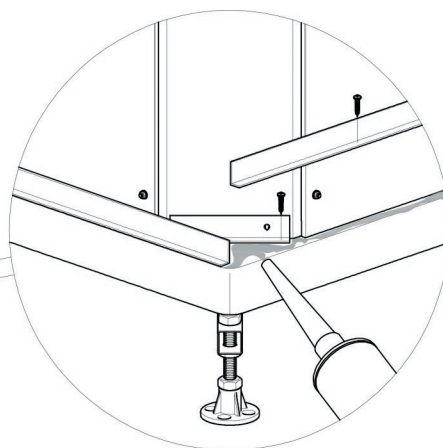


B6

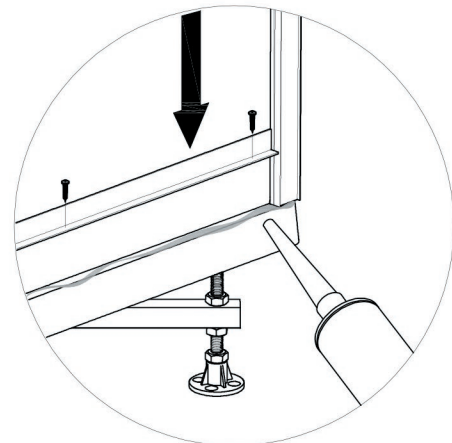


Нейтральный силиконовый герметик


B6

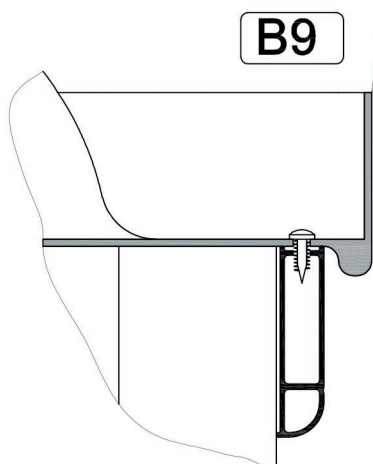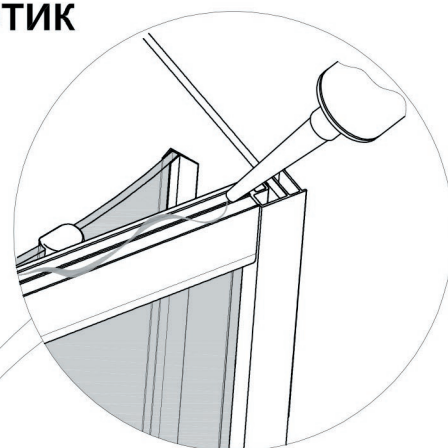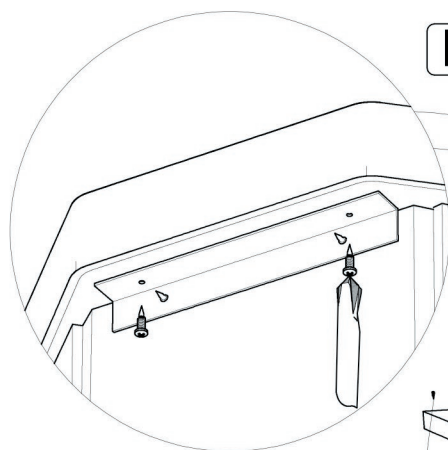

B9

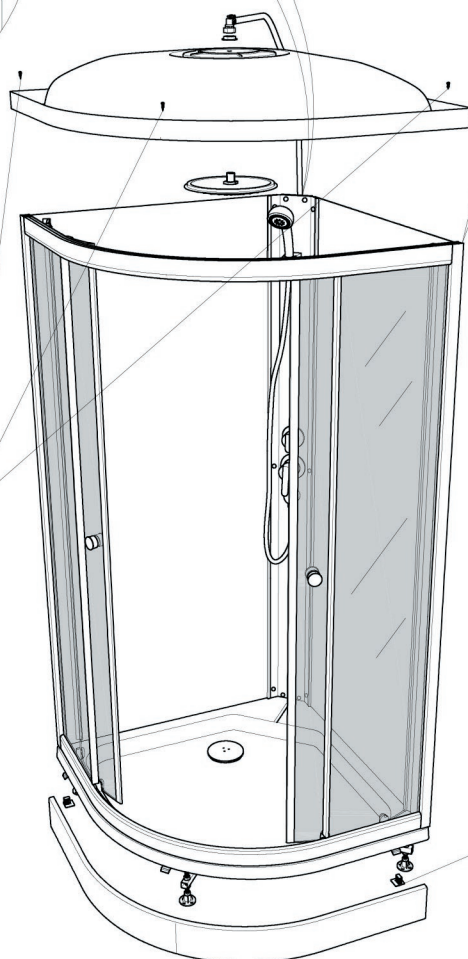

A8  
B5

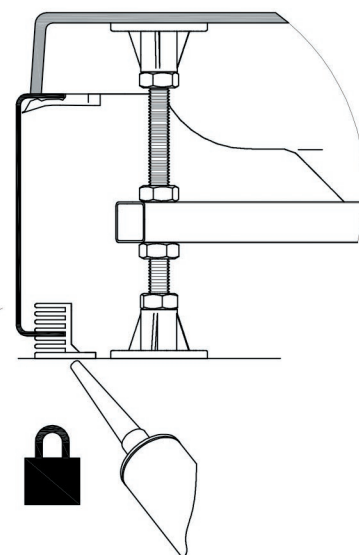



[www.3tn.ru](http://www.3tn.ru)